


Volts: Key on, engine not running

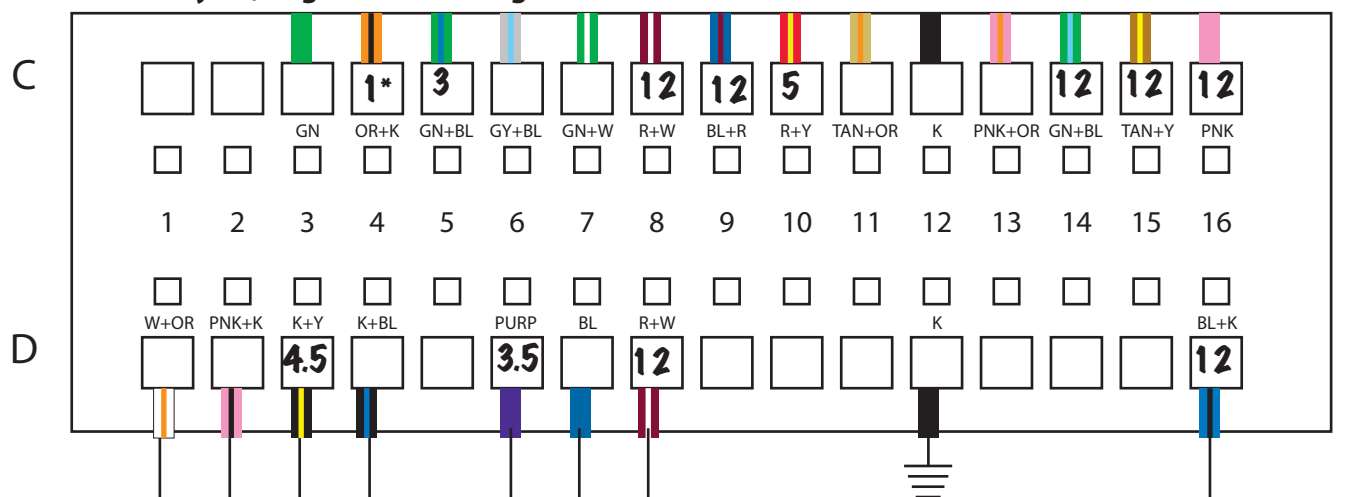

TCU Battery Diagnostic Feed
 Trans Output Speed Sensor(-)
 Trans Fluid Temp
 Throttle Position Sensor Ground
 Data Link (RX)
 Data Link (TX)
 Vehicle Speed Sensor

Buffered Tachometer Signal
 Transmission Overdrive Switch
 Throttle Position Sensor
 Trans Governor Pressure
 Trans Output Speed Sensor (+)
 TCU Battery Diagnostic Feed
 Ignition Accessory Feed
 Sensor Feed (+5V)
 Sensor Ground
 Ground
 Trans Overdrive Lamp
 Trans Solenoid
 Trans Solenoid (3-4 Shift)
 Trans Solenoid (Var Force)

Volts: Engine Running

